



# Aigly 125i WIRING DIAGRAM

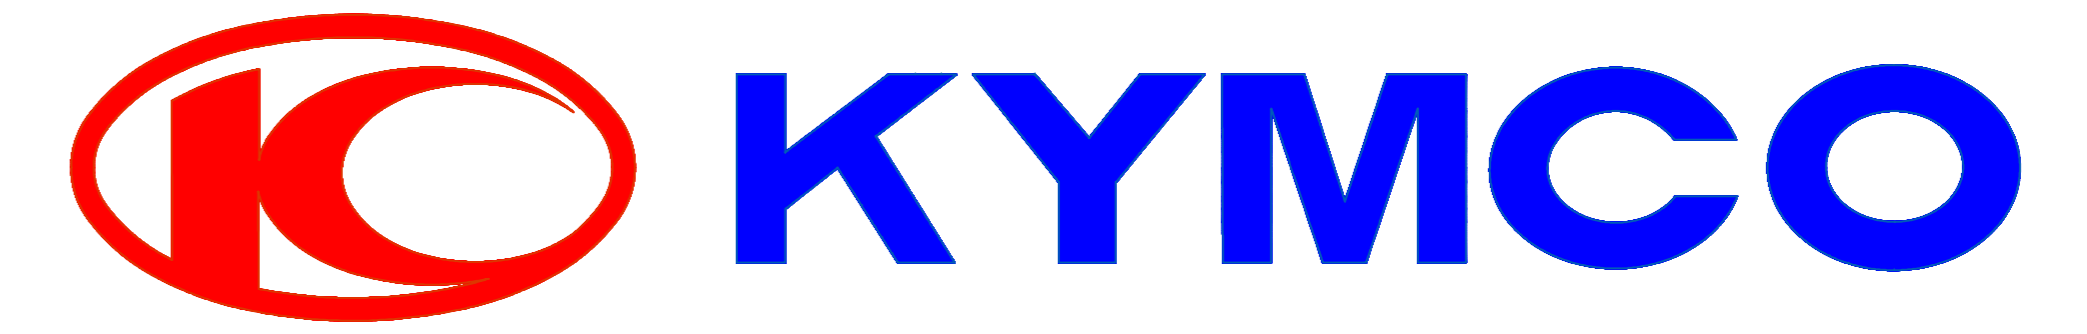

C4				F4	R/B	VBD	DIRECT BATTERY VOLTAGE	ECU 输入电源						
C3				F3	L/R	CELP	CHECK ENGINE LAMP	CHECK LAMP						
C2	G/L	ECT	ENGINE TEMPERATURE SENSOR	缸温信号	F2									
C1	V/R	V-SENS	SENSOR SUPPLY	信号 电源	F1									
B4	W/L	K-LINE	SERIAL COMMUNICATIONS	诊断器	E4				H4	G/B	PGND	POWER GROUND	接地	
B3					E3	P/R	DIG-2	DIGITAL INPUT (TPI RESET)	TPI 脚架	H3	B/Y	IGN	IGNITION COIL	线圈 信号
B2	L/Y	CRK-POS	CRANKSHAFT POSITION SENSOR(+)	PS(+)	E2					H2	W	HEGO-HEAT	HEATED O2 SENSOR	O2 传感器
B1	G/W	CRK-NEG	CRANKSHAFT POSITION SENSOR(-)	PS(-)	E1					H1	B/L	VBK	BATTERY VOLTAGE AFTER KEY	ECU 电源 (KEY)
A4	P	GAN-LOW	SERIAL COMMUNICATIONS	CAN 系统	D4					G4				
A3	P/G	GAN-HIGH	SERIAL COMMUNICATIONS	CAN 系统	D3	B/W	TSW	TILT SWITCH	倾斜信号	G3				
A2					D2	B	HEGO-SENS	HEATED O2 SENSOR	O2 信号	G2	B/R	FUEL-PUMP	FUEL PUMP	汽油泵信号
A1					D1	V/G	SGND	SENSOR GROUND	ECU 接地	G1	W/R	INJ	INJECTOR	喷嘴信号
PIN	COLOR	LABEL	PI FUNCTION		PIN	COLOR	LABEL	PI FUNCTION		PIN	COLOR	LABEL	PI FUNCTION	

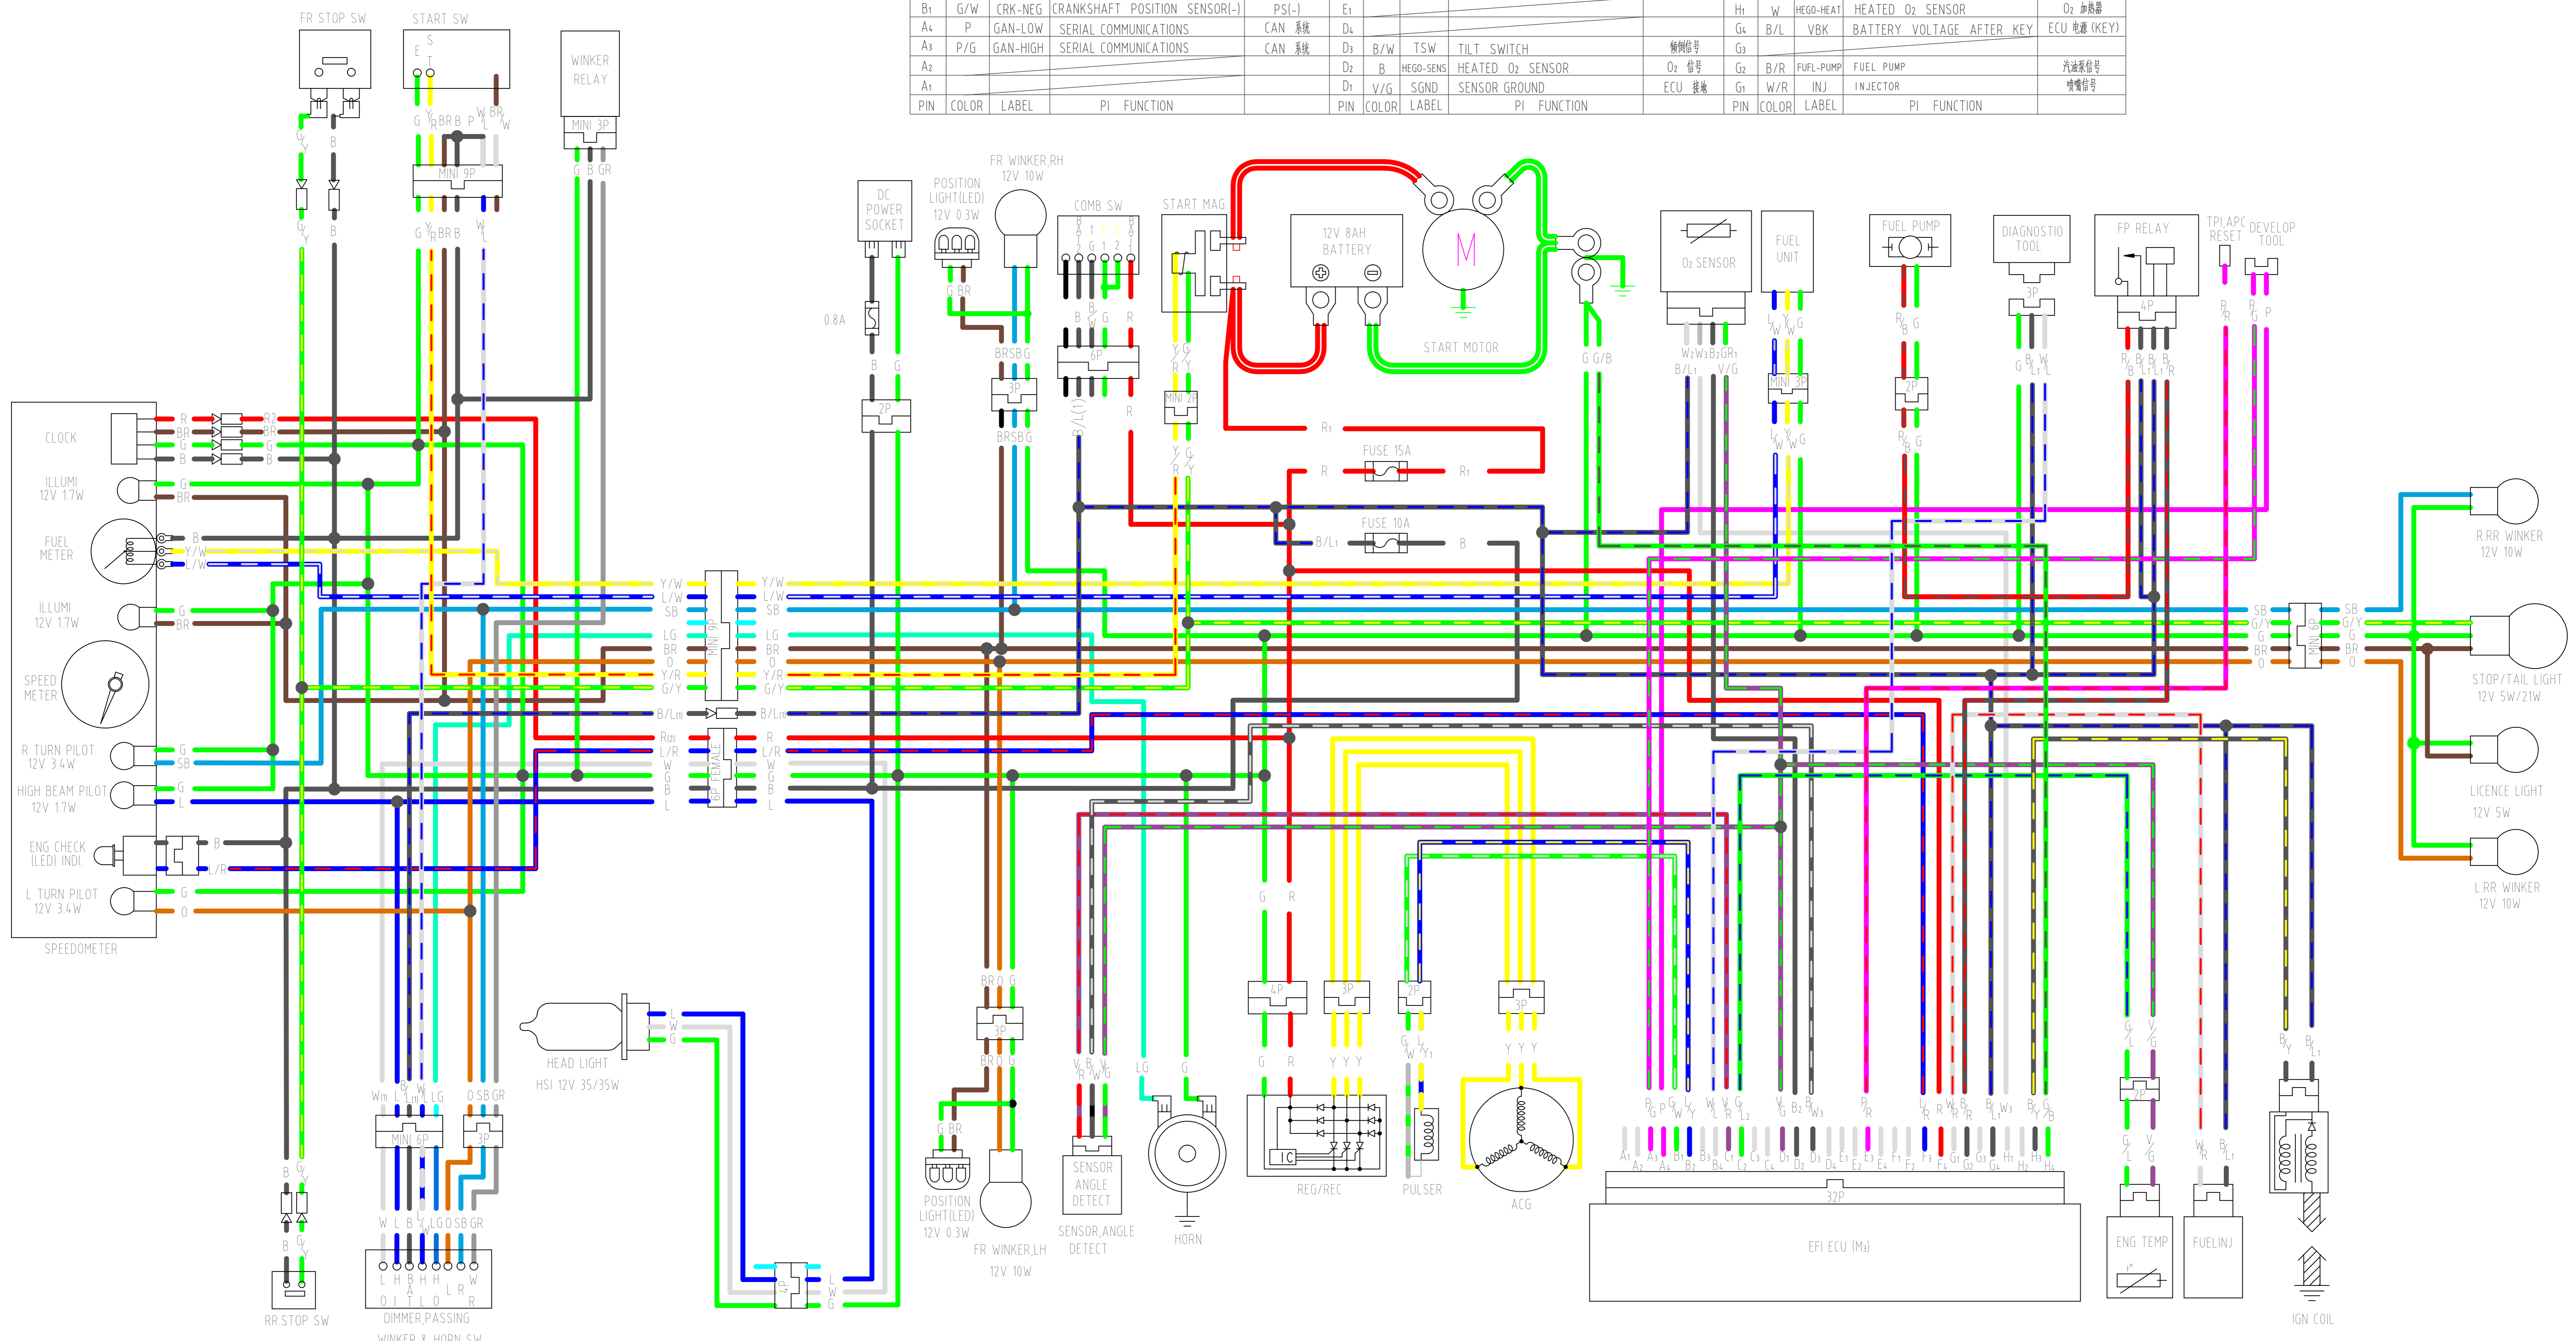

	IG	E1,E2	BAT1	BAT2
ON	○	○	○	○
OFF	○	○		
LOCK	○	○		
CORD COLOR	B/W	G	R	B

	ST	E
FREE		
PUSH	○	○
CORD COLOR	Y/R	G

	WR	R	L
L ←	○		○
N			
R →	○	○	
CORD COLOR	GR	SB	O

	HL	LO	HI	PASS
LO	○	○		
N	○	○	○	
HI	○		○	
PUSH	○	○	○	○
CORD COLOR	L/W	W	L	B

	HO	BAT
FREE		
PUSH	○	○
CORD COLOR	LG	B