



AGILITY 50 4T 12'' EURO 4 WIRING DIAGRAM

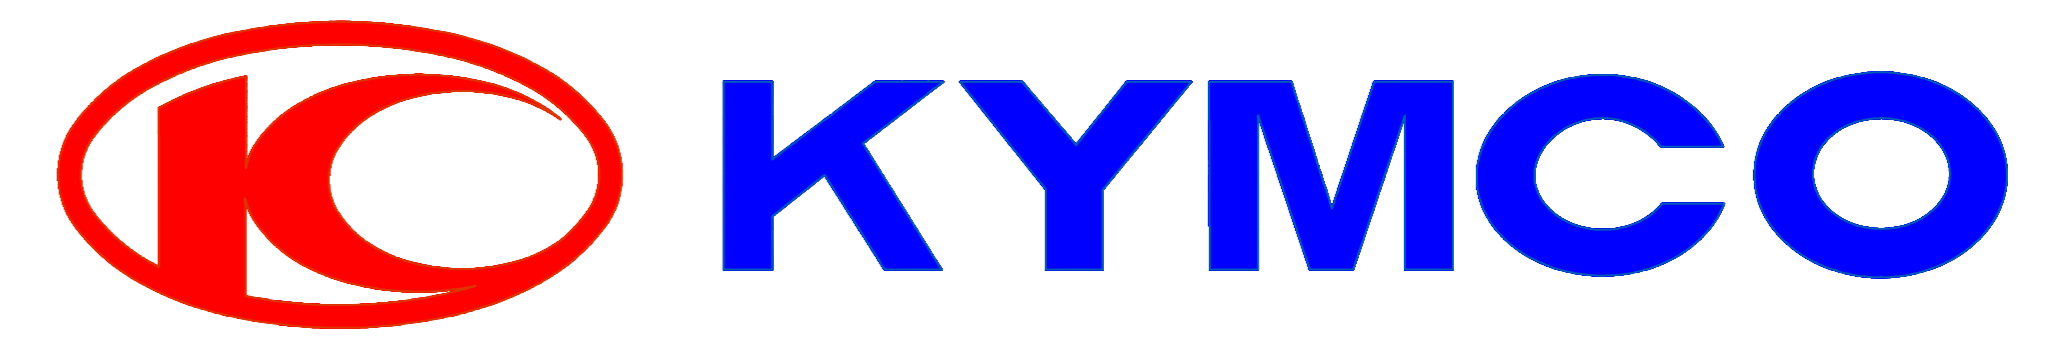

1	B/L(1)	Vbat	ECU電源	10	V/R	+5V ECU Out	ECU +5V輸出
2	V/G	Signal Gnd	信號接地	11	-	Not Available	無用(空脚)
3	B(1)	O2 SENSOR	含氧感測器信號	12	L/O	K-Line	診斷線接腳
4	V/B	TPS In	TPS輸入	13	G/L	NTC Eng In	Eng溫度信號輸入
5	L/Y	CRANKSHAFT POSITION SENSOR	曲軸位置信號	14	B/W	Eng Off(KILL SW用)	熄火開關(自鎖線)
6	R/GR	SP SENSOR	速度感測器信號	15	B/R	RPM Singal Out	RPM信號輸出
7	P/G	MAP SW(nomal close)	點火MAP切換開關	16	L/R	ML(Malfunction Indicator Lamp)	故障指示燈(自鎖線)
8	W/R	PWM Air Out	PWM補氣輸出	17	G/B	Power GND	電源接地
9	P/Y	Auto By Start	自動阻機門	18	B/Y	IGN Out	點火信號輸出
PIN	COLOR	Pin Function	功能	PIN	COLOR	Pin Function	功能

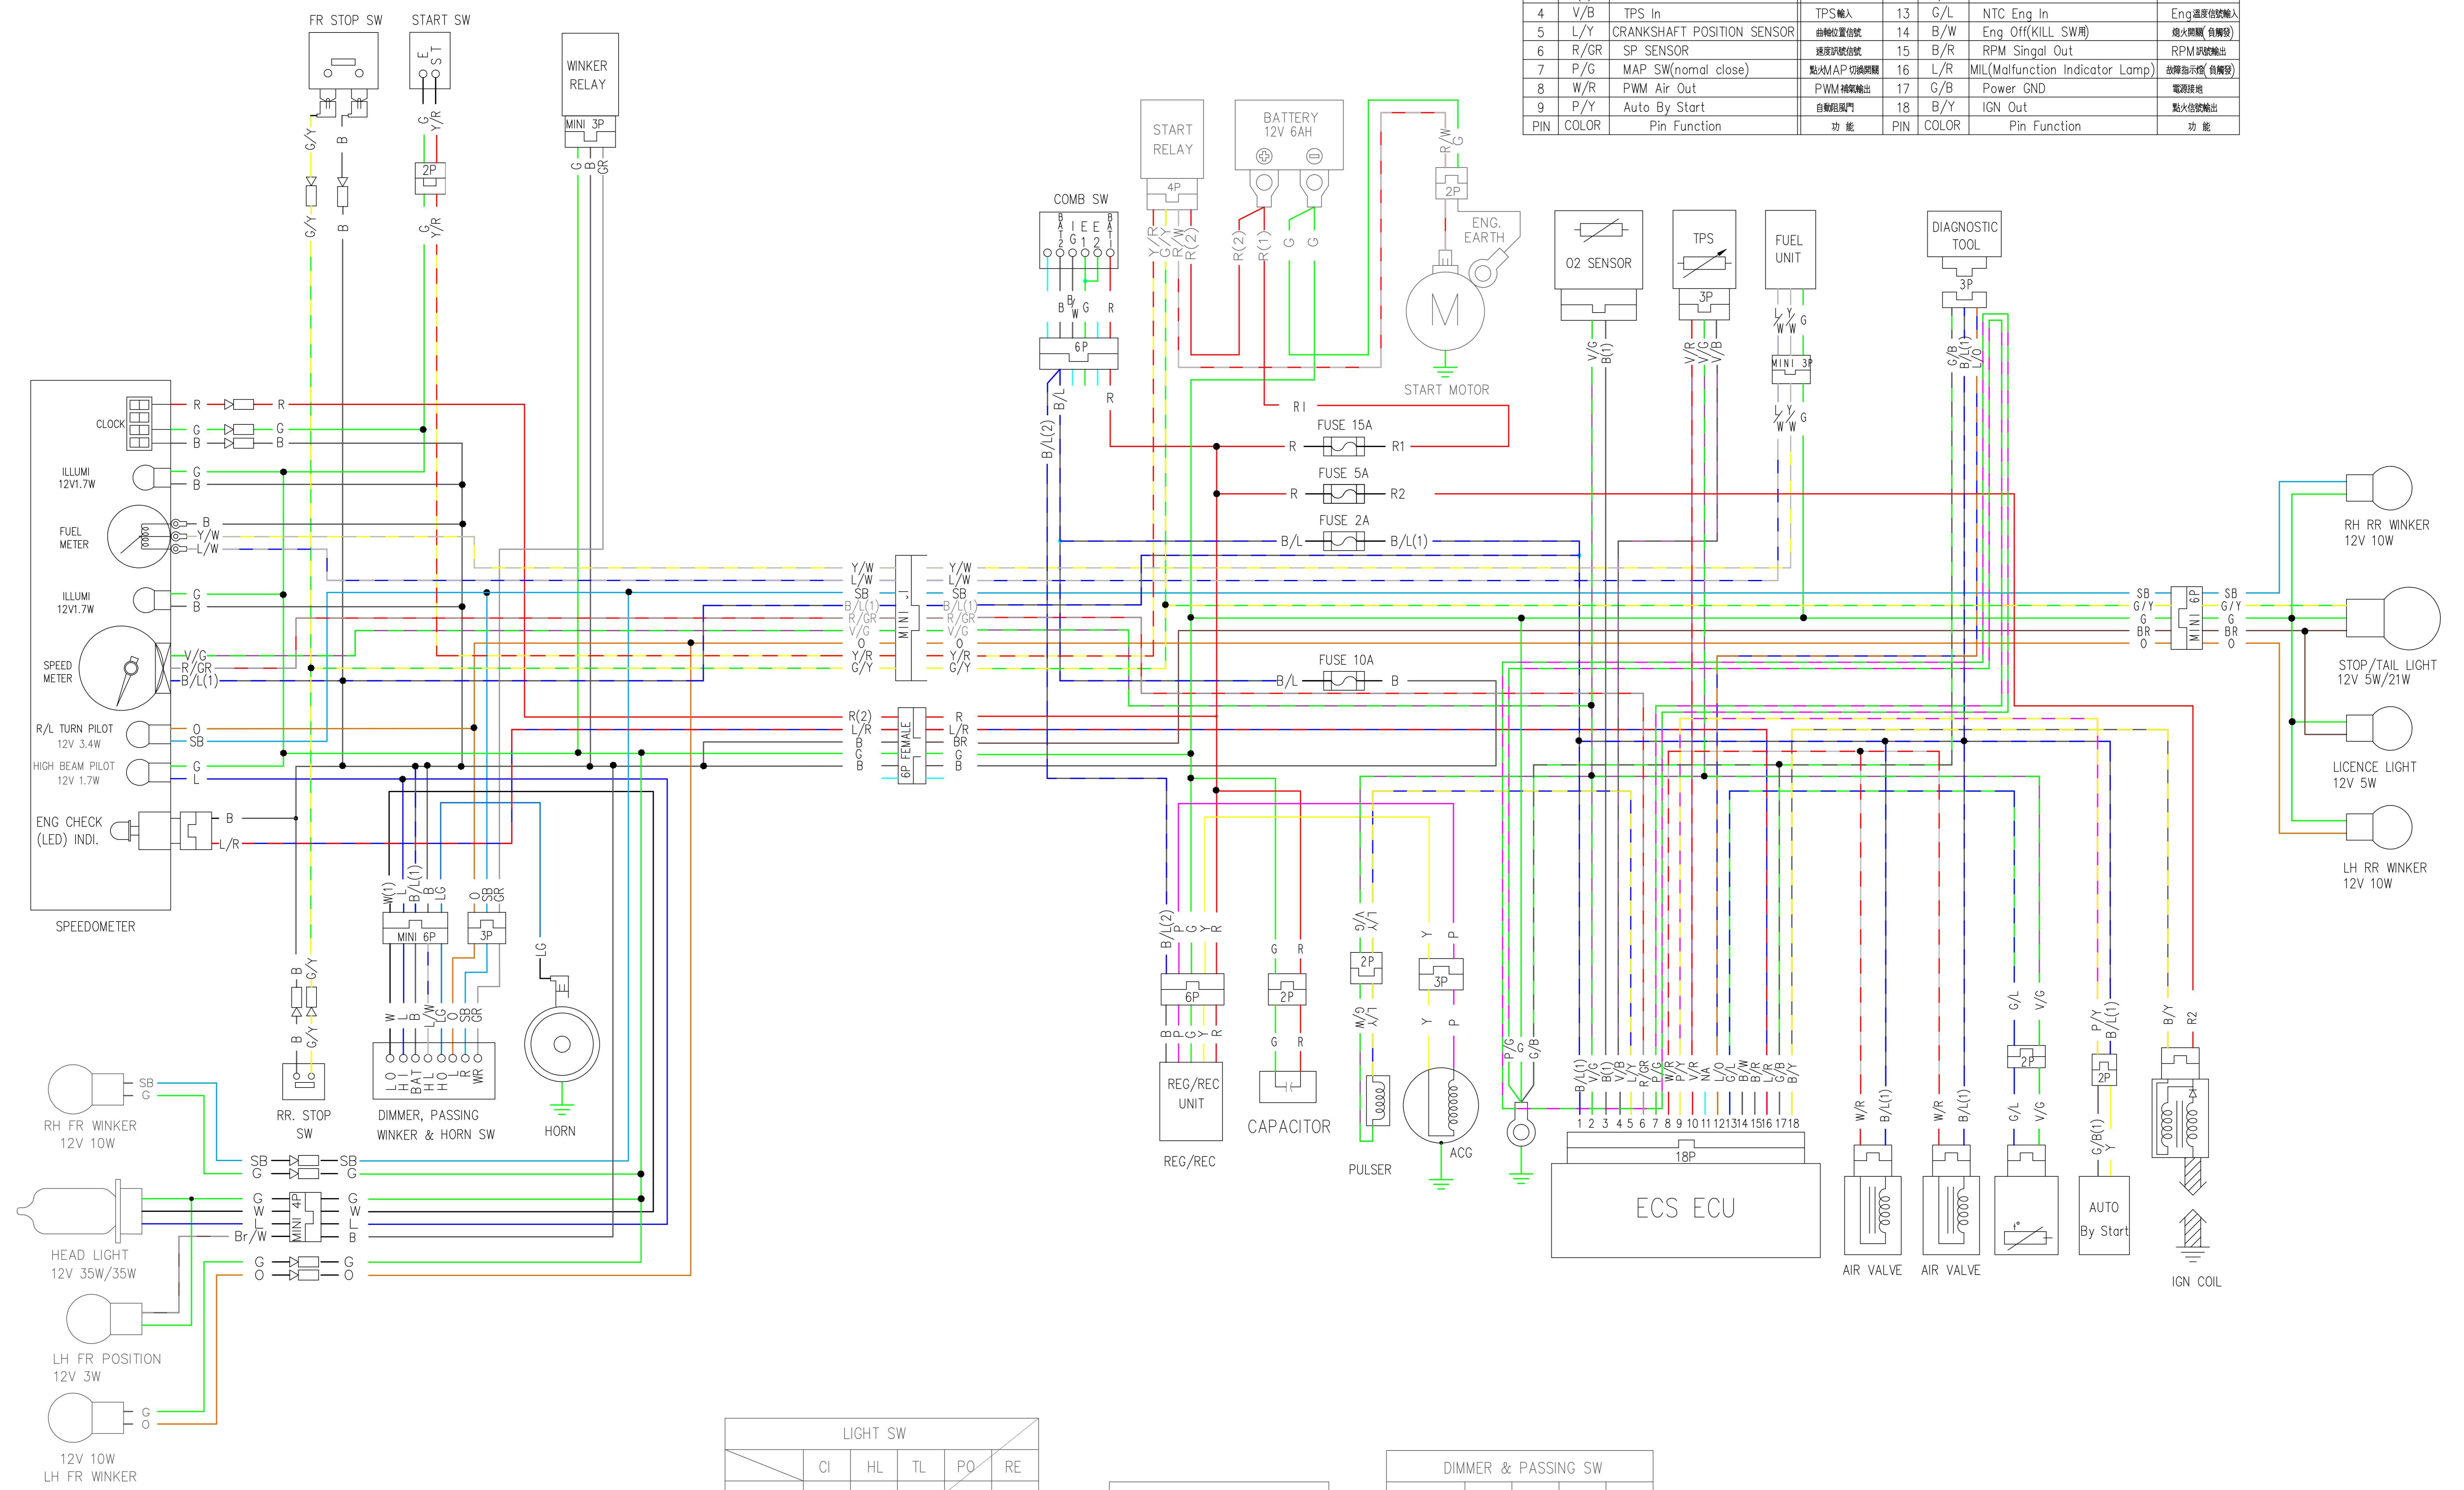

	IG	E1.E2	BAT1	BAT2
ON	○	○	○	○
OFF	○	○	○	○
LOCK	○	○	○	○
CORD COLOR	B/W	G	R	B

	ST	E
FREE	○	○
PUSH	○	○
CORD COLOR	Y/R	G

	CI	HL	TL	PO	RE
OFF	○	○	○	○	○
N	○	○	○	○	○
P	○	○	○	○	○
N	○	○	○	○	○
H	○	○	○	○	○
CORD COLOR	Y	L/W	BR	BR/W	P

	WR	R	L
L	○	○	○
N	○	○	○
R	○	○	○
CORD COLOR	GR	SB	O

	HL	LO	HI	PASS
LO	○	○	○	○
(N)	○	○	○	○
HI	○	○	○	○
PUSH	○	○	○	○
CORD COLOR	L/W	W	L	B

	HO	BAT
FREE	○	○
PUSH	○	○
CORD COLOR	LG	B