



NEW DOWNTOWN 350 TCS Wiring Diagram

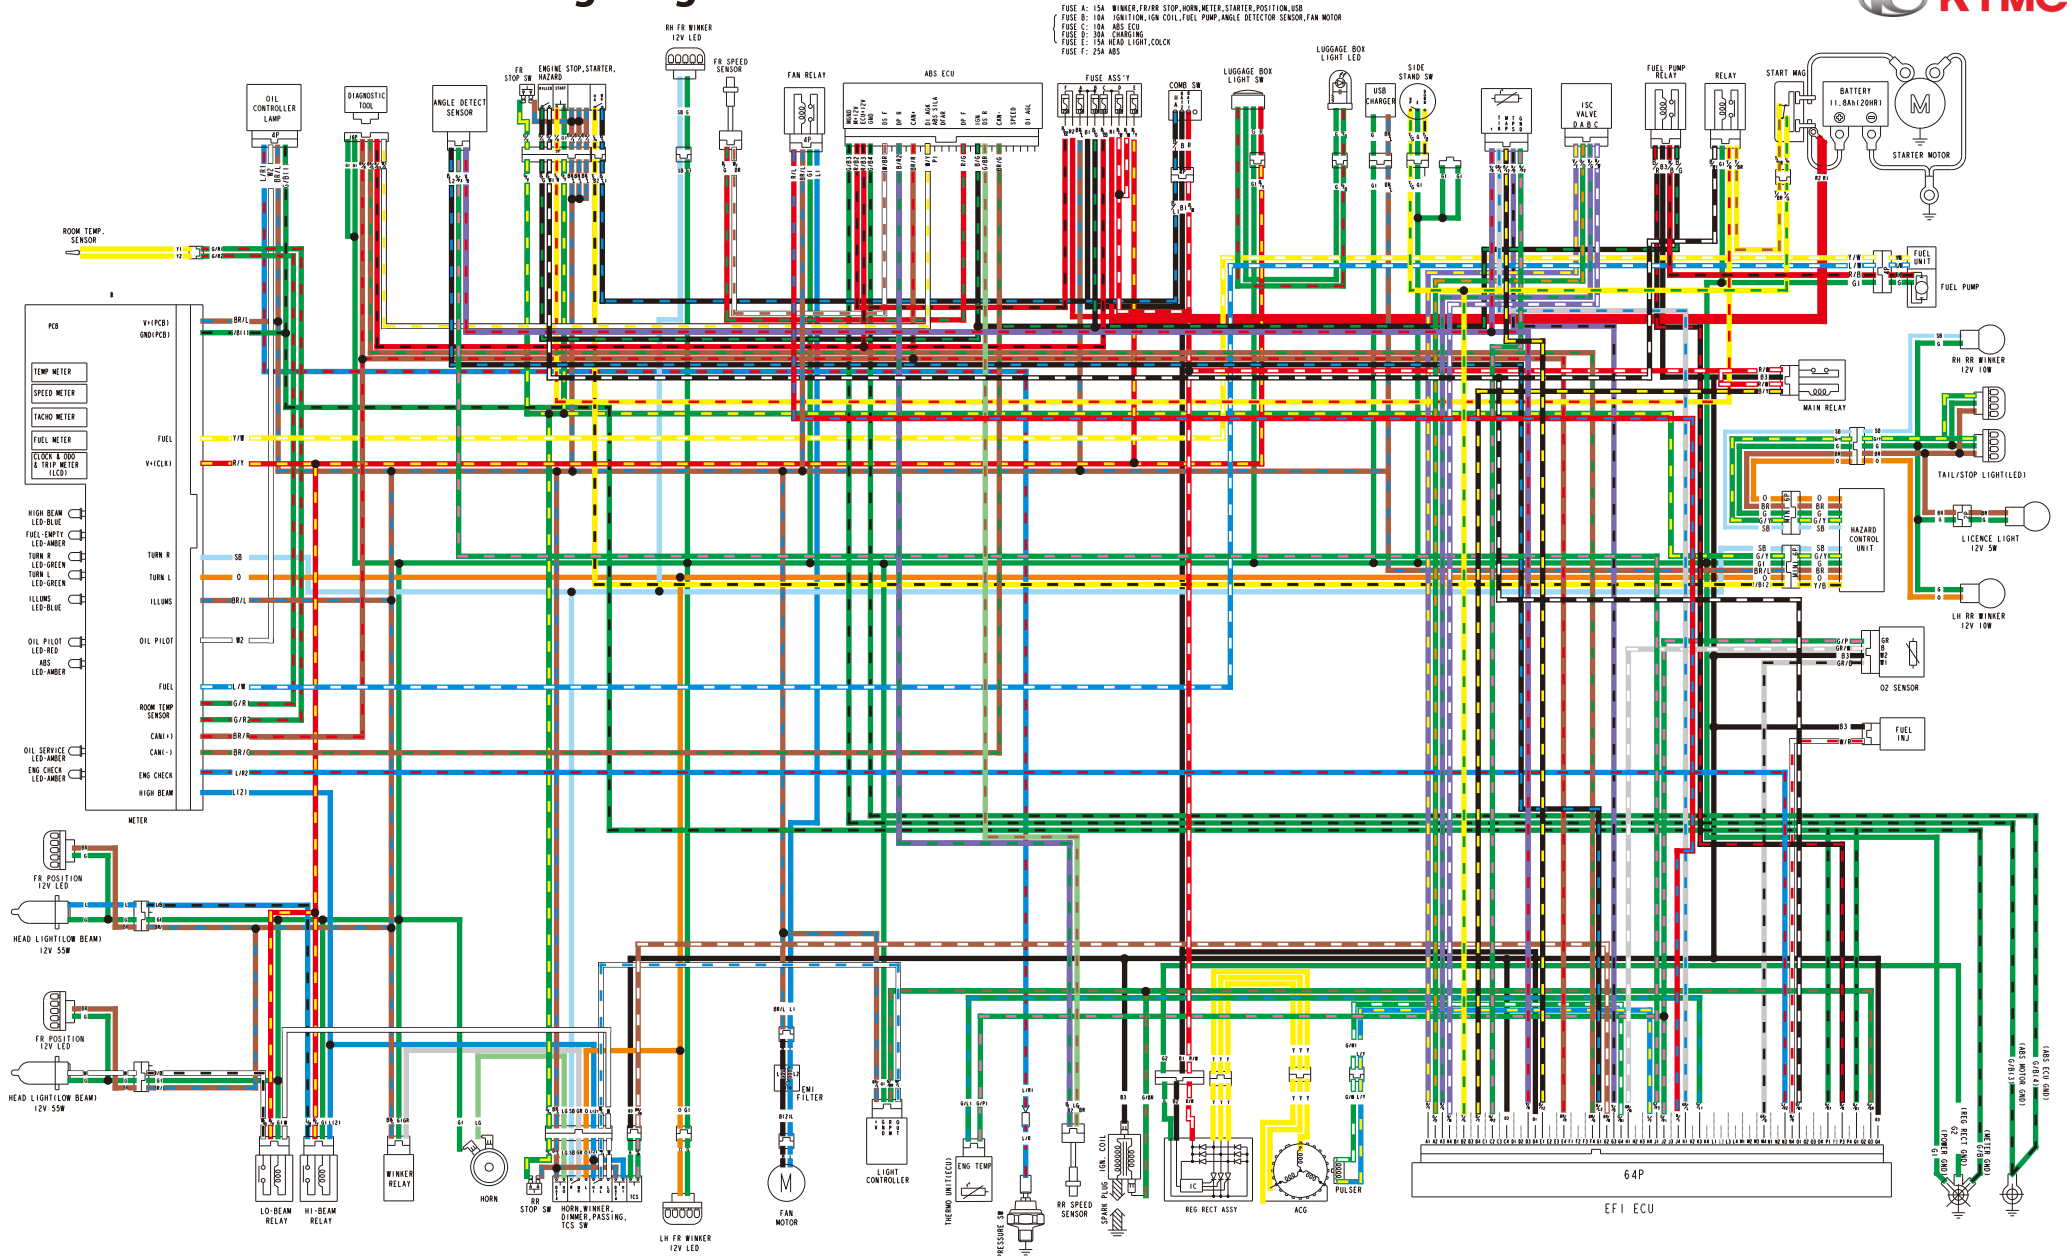

FUSE A: 15A WINNER,FR/RR STOP,HORN,METER,STARTER,POSITION,HSR
 FUSE B: 10A IGNITION,IGN COIL,FUEL PUMP,ANGLE DETECTOR SENSOR,FAN MOTOR
 FUSE C: 10A ABS ECU
 FUSE D: 30A CHARGING
 FUSE E: 15A HEAD LIGHT,COCK
 FUSE F: 25A ABS

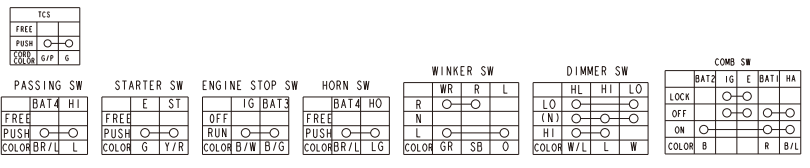

B-A1 STEPPER A.N (A)	B-D1	B-G1 TILT SIGNAL	B-K1 SW	B-N1	B-Q1 PUMP 1
B-A2 STEPPER B.N (A)	B-D2 (SENSE2)FPS	B-G2 MODE SW	B-K2	B-N2	B-Q2
B-A3 STEPPER B.N (B)	B-D3 (SENSE1)IMP, TILT	B-G3 TPS SIGNAL	B-K3 THERMO	B-N3 W/L	B-Q3 IGNITION COIL
B-A4 STEPPER B.P (C)	B-D4 HORN	B-G4 CPS VIT	B-K4	B-N4 RELAY	B-Q4 W/R
B-B1	B-E1 WINDFOLD AIR PRESSURE	B-G5 O2 SIGNAL	B-L1	B-O1 FUEL SW	B-P1 F1 FUNCTION
B-B2 SIDE STAND SW	B-E2 (CAN-HIGH)	B-H2	B-L2	B-O2	B-P2 F2 FUNCTION
B-B3 MAKE SW	B-E3	B-I2	B-L3	B-O3	B-P3 F3 FUNCTION
B-B4 MAIN RELAY	B-E4 (CAN-LOW)	B-J2	B-L4	B-O4	B-P4 F4 FUNCTION
B-C1	B-F1	B-K2	B-M1	B-P1 PUMP 2	B-Q5
B-C2 (SENSING)	B-F2	B-L2	B-M2	B-P2 FUEL PUMP RELAY	B-Q6
B-C3 START SW	B-F3	B-M2	B-N2	B-P3 STARTER RELAY	B-Q7
B-C4 W/R	B-F4 CAN-LOW	B-J4 FAN RELAY	B-M4 O2 HEAT	B-P4 STARTER RELAY	B-Q8
P1A P1 FUNCTION	P1B P1 FUNCTION	P1C P1 FUNCTION	P1D P1 FUNCTION	P1E P1 FUNCTION	P1F P1 FUNCTION

電路顏色代號

黑-B	茶-OR
黃-Y	橙-O
藍-L	空-SB
綠-G	淺綠-LG
紅-R	桃-P
白-W	灰-GR
紫-V	