


# New People S 50 E5 WIRING DIAGRAM



PIN	COLOR	LABEL	PI FUNCTION	PIN	COLOR	LABEL	PI FUNCTION	PIN	COLOR	LABEL	PI FUNCTION
C4	R/W	VEH_SPEED	VEHICLE SPEED	F4	R3	VBD	DIRECT BATTERY VOLTAGE				
C3	G/L3	ECT	ENGINE TEMPERATURE SENSOR	F3	L/R	CELP	CHECK ENGINE LAMP				
C2	G/L3	ECT	ENGINE TEMPERATURE SENSOR	F2							
C1	V/R	V_SENS	SENSOR SUPPLY	F1	B/Y(2)	RPM	ENG SIGNAL				
B4	W/L	K_LINE	SERIAL COMMUNICATIONS	E4				H4	G3	PGND	POWER GROUND
B3				E3				H3	B/Y1	IGN	IGNITION COIL
B2	L/Y	CRK_POS	CRANKSHAFT POSITION SENSOR (+)	E2				H2			
B1	G/W	CRK_NEG	CRANKSHAFT POSITION SENSOR (-)	E1				H1	W1	HEGO-HEAT	HEATED O2 SENSOR
A4				D4				G4	R/B4	VBK	BATTERY VOLTAGE AFTER KEY
A3				D3	B/W	TSW	TILT SWITCH	G3			
A2				D2	B2	HEGO-SENS	HEATED O2 SENSOR	G2	B/R	FUEL_PUMP	FUEL PUMP
A1				D1	V/G	SGND	SENSOR GROUND	G1	W/R	INJ	INJECTOR

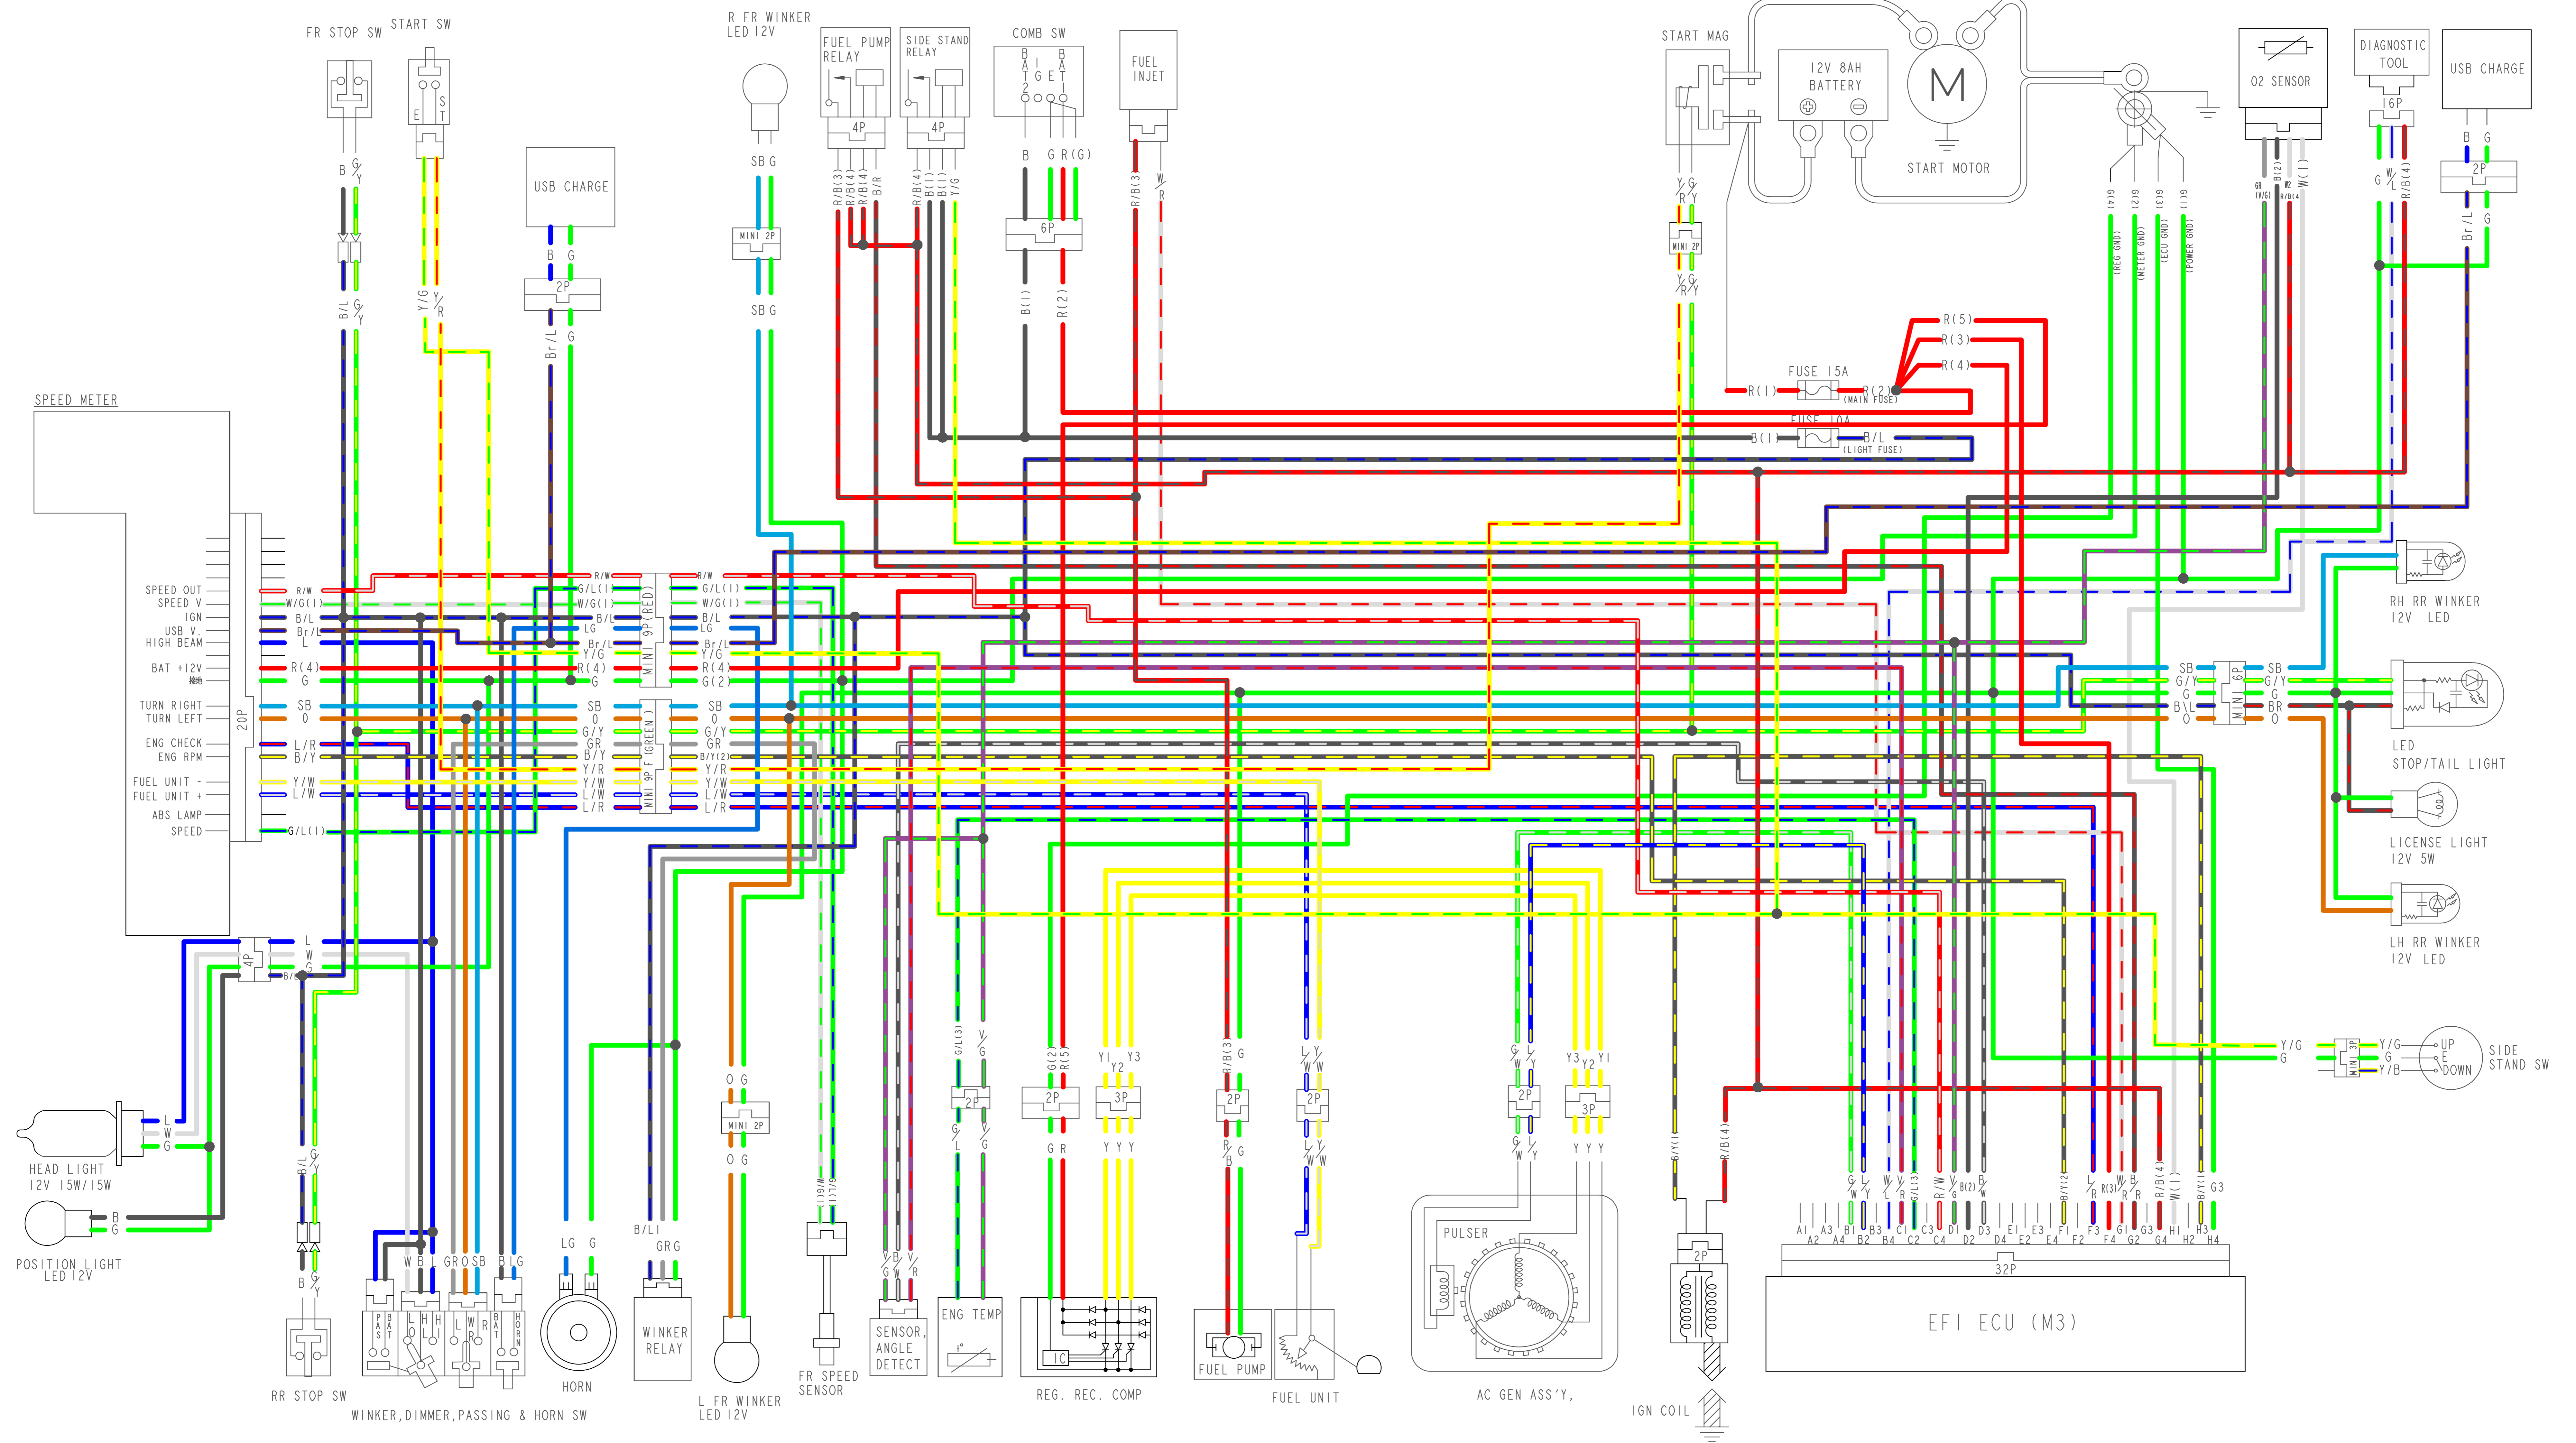