

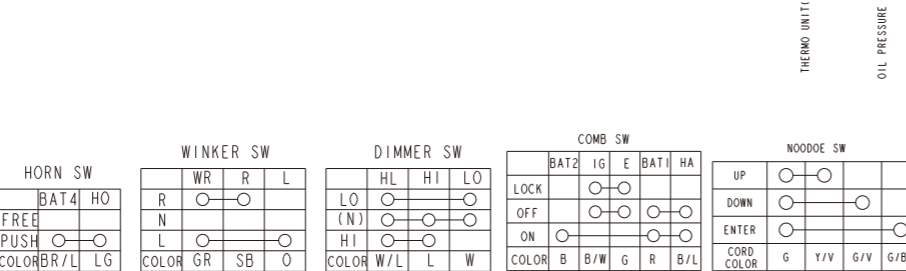


# XCITING S 400 ABS&TCS WIRING DIAGRAM

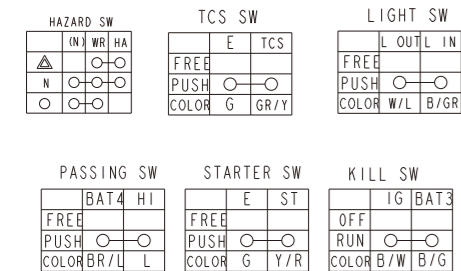

- FUSE A: 15A (WINKER, FR/RR STOP, HORN, METER, STARTER, POSITION, PHONE)
- FUSE B: 15A (IGNITION, IGN. COIL, FUEL PUMP, ANGLE DETECTOR SENSOR, FAN MOTOR)
- FUSE C: 30A (CHARGING)
- FUSE D: 25A (ABS MOTOR)
- FUSE E: 5A (HEAD LIGHT, COLCK)
- FUSE F: 10A (ABS ECU)
- FUSE H: 5A (HAZARD, MAGNET VALVE CONTROLLER)

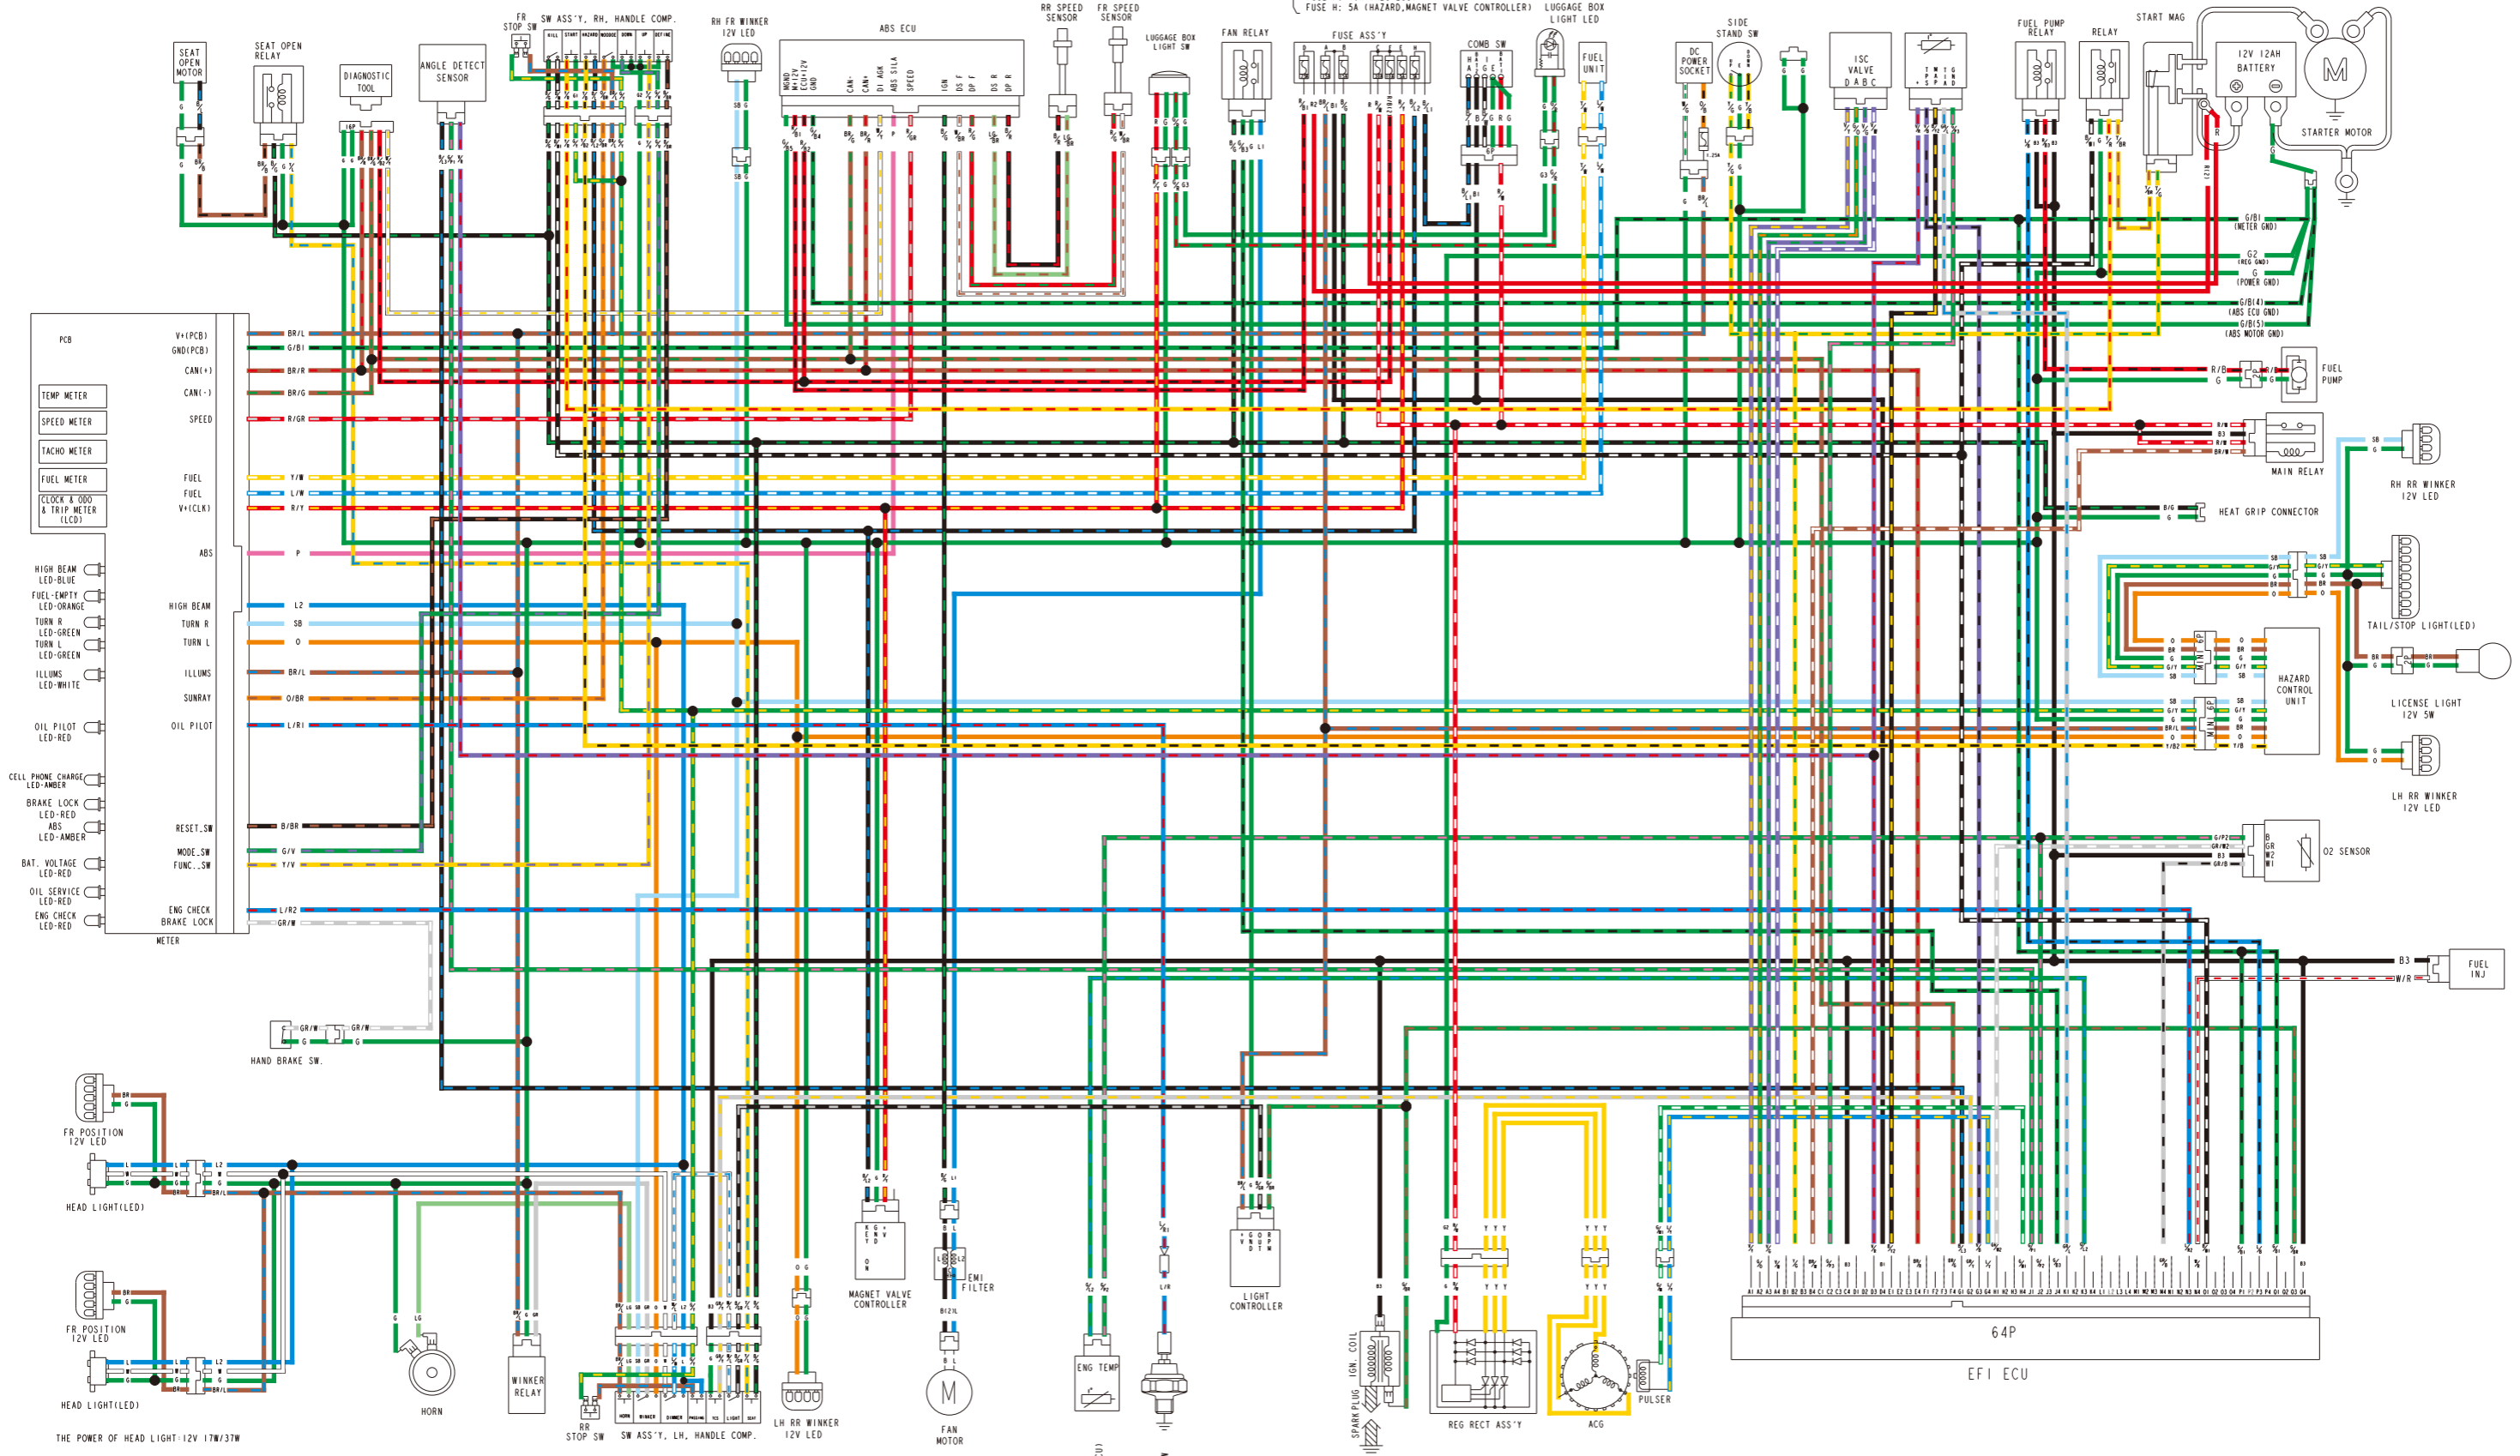

B-A1 STEPPER A,N (D)	B-D1	B-G1 TILT SIGNAL	B-K1 TIA	B-N1	B-O1 POND 1
B-A2 STEPPER A,P (A)	B-D2 VSSENS2(TPS)	B-G2 MODE SW	B-K2	B-N2	B-O2
B-A3 STEPPER B,N (B)	B-D3 VSSENS1(MAP, TILT)	B-G3 TPS SIGNAL	B-K3 THERMO	B-N3 MIL	B-O3 IGNITION COIL
B-A4 STEPPER B,P (C)	B-D4 VDR	B-G4 CPS (+)	B-K4	B-N4 INJ-1	B-O4 VDR
B-B1	B-E1 MANIFOLD AIR PRESSURE	B-H1 O2 SIGNAL	B-L1	B-O1 KILL SW	B-P1 POND 2
B-B2 SIDE STAND SW	B-E2 SGN01(TPS)	B-H2	B-L2	B-O2	B-P2
B-B3 BRAKE SW	B-E3	B-H3	B-L3	B-O3	B-P3 FUEL PUMP RELAY
B-B4 MAIN RELAY	B-E4 CAN-HIGH(+)	B-H4 CPS (-)	B-L4	B-O4	B-P4 STARTER RELAY
B-C1	B-F1	B-J1 SGN04(TILT)	B-M1		
B-C2 SGN02(MAP)	B-F2	B-J2 SGN03(THERMO, TIA, O2)	B-M2		
B-C3 START SW	B-F3	B-J3	B-M3		
B-C4 VDR	B-F4 CAN-LOW(-)	B-J4 FAN RELAY	B-M4 O2 HEAT		
PIN P1 FUNCTION	PIN P1 FUNCTION	PIN P1 FUNCTION	PIN P1 FUNCTION		

COLOR COMB GROUND/MARKING

黑-B	茶-BR
黄-Y	橙-O
藍-L	空-SB
綠-G	淺綠-LG
紅-R	桃-P
白-W	灰-GR
紫-V	