People S 125i/200i EURO 5

WIRING DIAGRAM

KYMCO

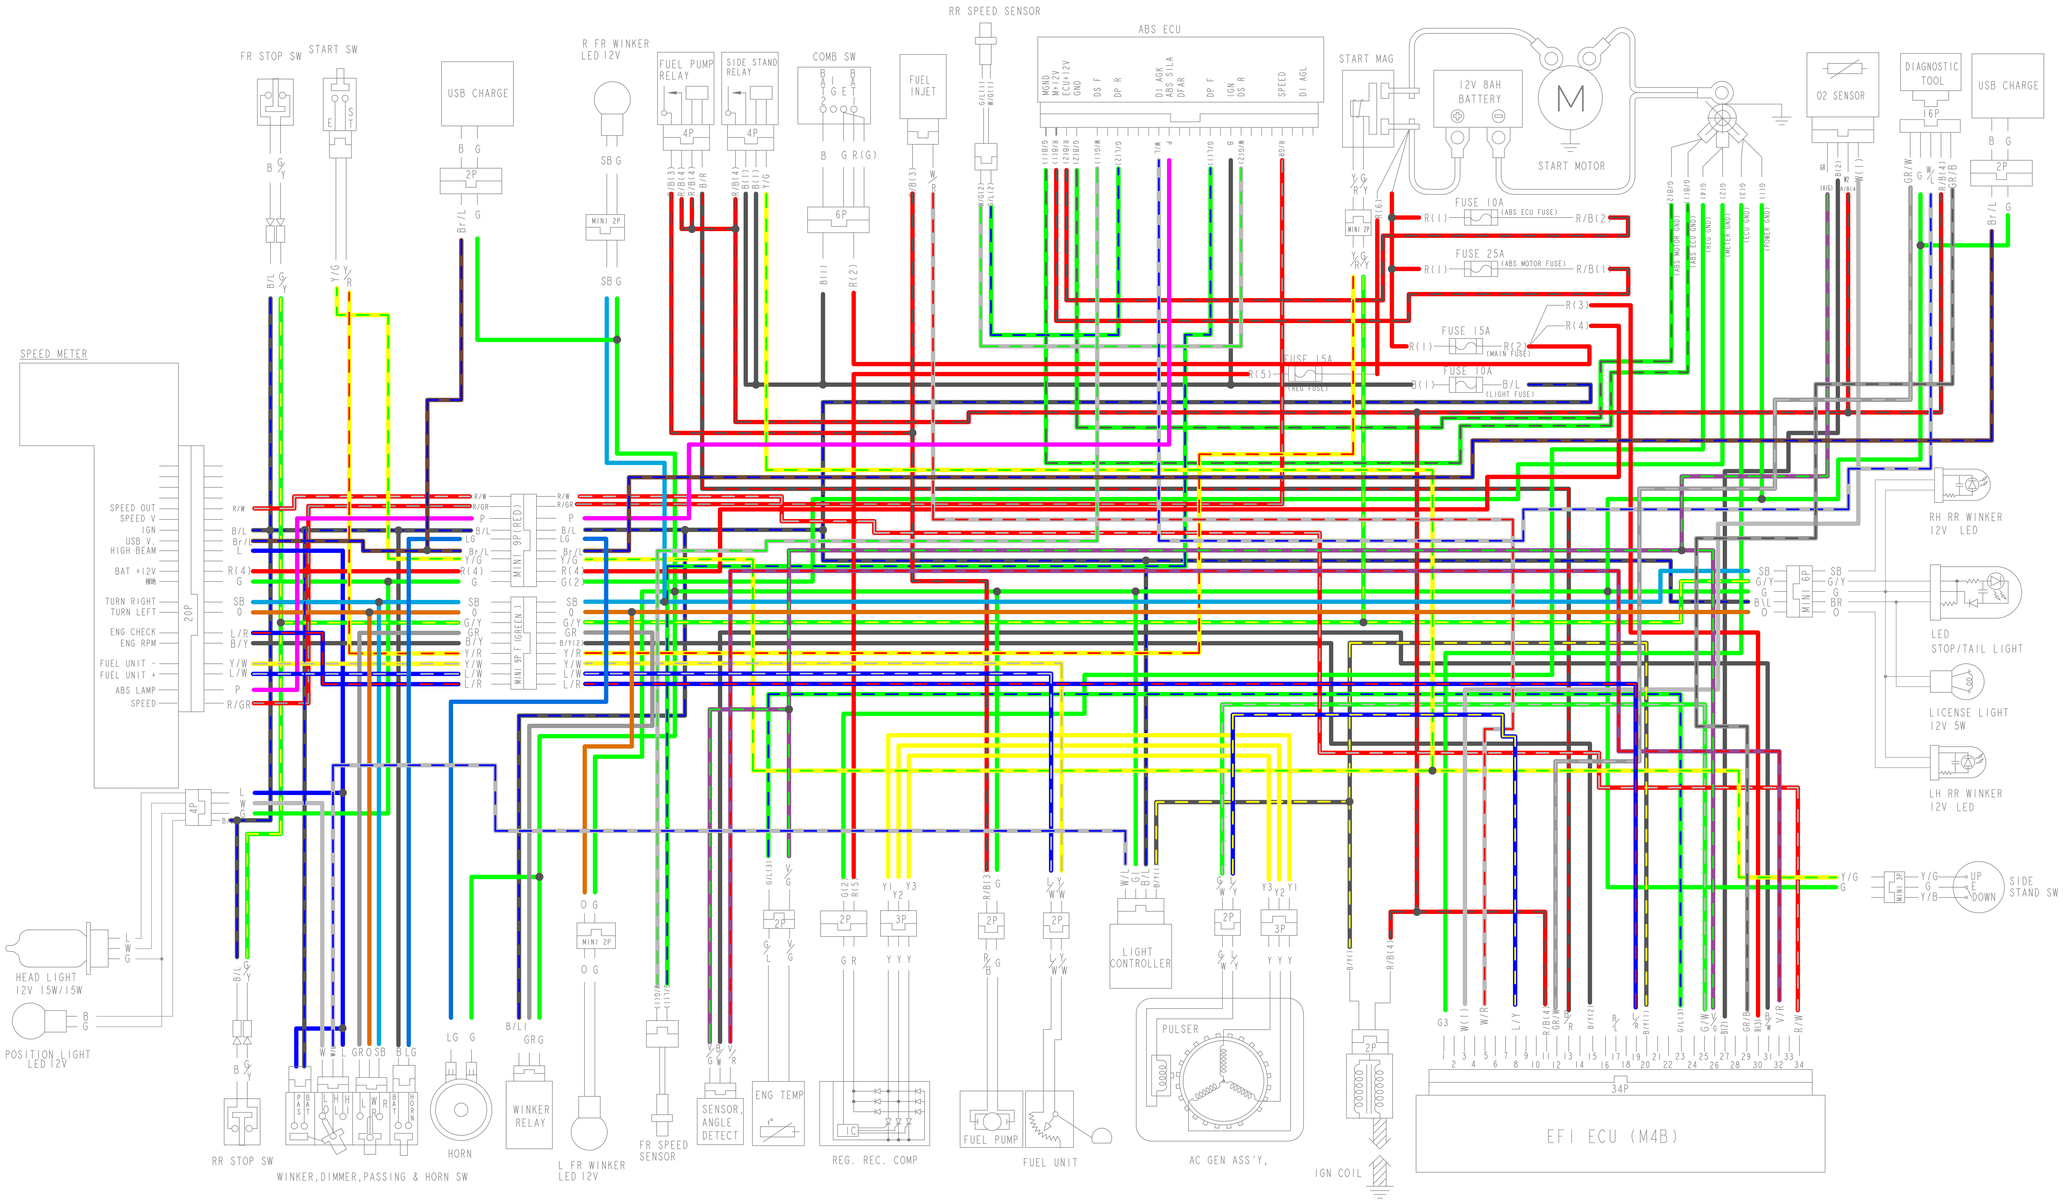

12	GR/W		CAN HI	24							
11	R/B4	VBK	BATTERY VOLTAGE AFTER KEY	23	G/L3	ECT	ENGINE TEMPERATURE SENSOR				
10				22				34	R/W	VEH_SPEED	VEHICLE SPEED
9				21				33			
8	L/Y	CRK_POS	CRANKSHAFT POSITION SENSOR (+)	20	B/Y1	IGN	IGNITION COIL	32	V/R	V_SENS	SENSOR SUPPLY
7				19	L/R	CELP	CHECK ENGINE LAMP	31	B/W	TSW	TILT SWITCH
6				18				30	R3	VBD	DIRECT BATTERY VOLTAGE
5	W/R	INJ	INJECTOR	17				29	GR/B		CAN LOW
4				16				28			
3	WI	HEGO_HEAT	HEATED O2 SENSOR	15	B/Y12	RPM	ENG SIGNAL	27	B2	HEGO_SENS	HEATED O2 SENSOR
2				14				26	V/G	SGND	SENSOR GROUND
1	G3	PGND	POWER GROUND	13	B/R	FUEL_PUMP	FUEL PUMP	25	G/W	CRK_NEG	CRANKSHAFT POSITION SENSOR (-)
PIN	COLOR	LABEL	PI FUNCTION	PIN	COLOR	LABEL	PI FUNCTION	PIN	COLOR	LABEL	PI FUNCTION

HORN SW

	HO	BAT2
FREE		
PUSH	○	○
CORD	LG	B

WINKER SW

	R	L	WR
L		○	○
N			
R	○		○
CORD	SB	O	GR

DIMMER & PASSING SW

	HL	HI	LO	BAT2	PASS
PASS				○	○
LO	○		○		
N	○		○		
HI	○	○			
CORD	B	L	W	B	L

START SW

	ST	E
FREE		
PUSH	○	○
CORD	Y/R	G

COMB SW

	BAT1	BAT2	IG	E
LOCK			○	○
OFF			○	○
ON	○	○		
OFF	○	○	○	
CORD	R	B		