
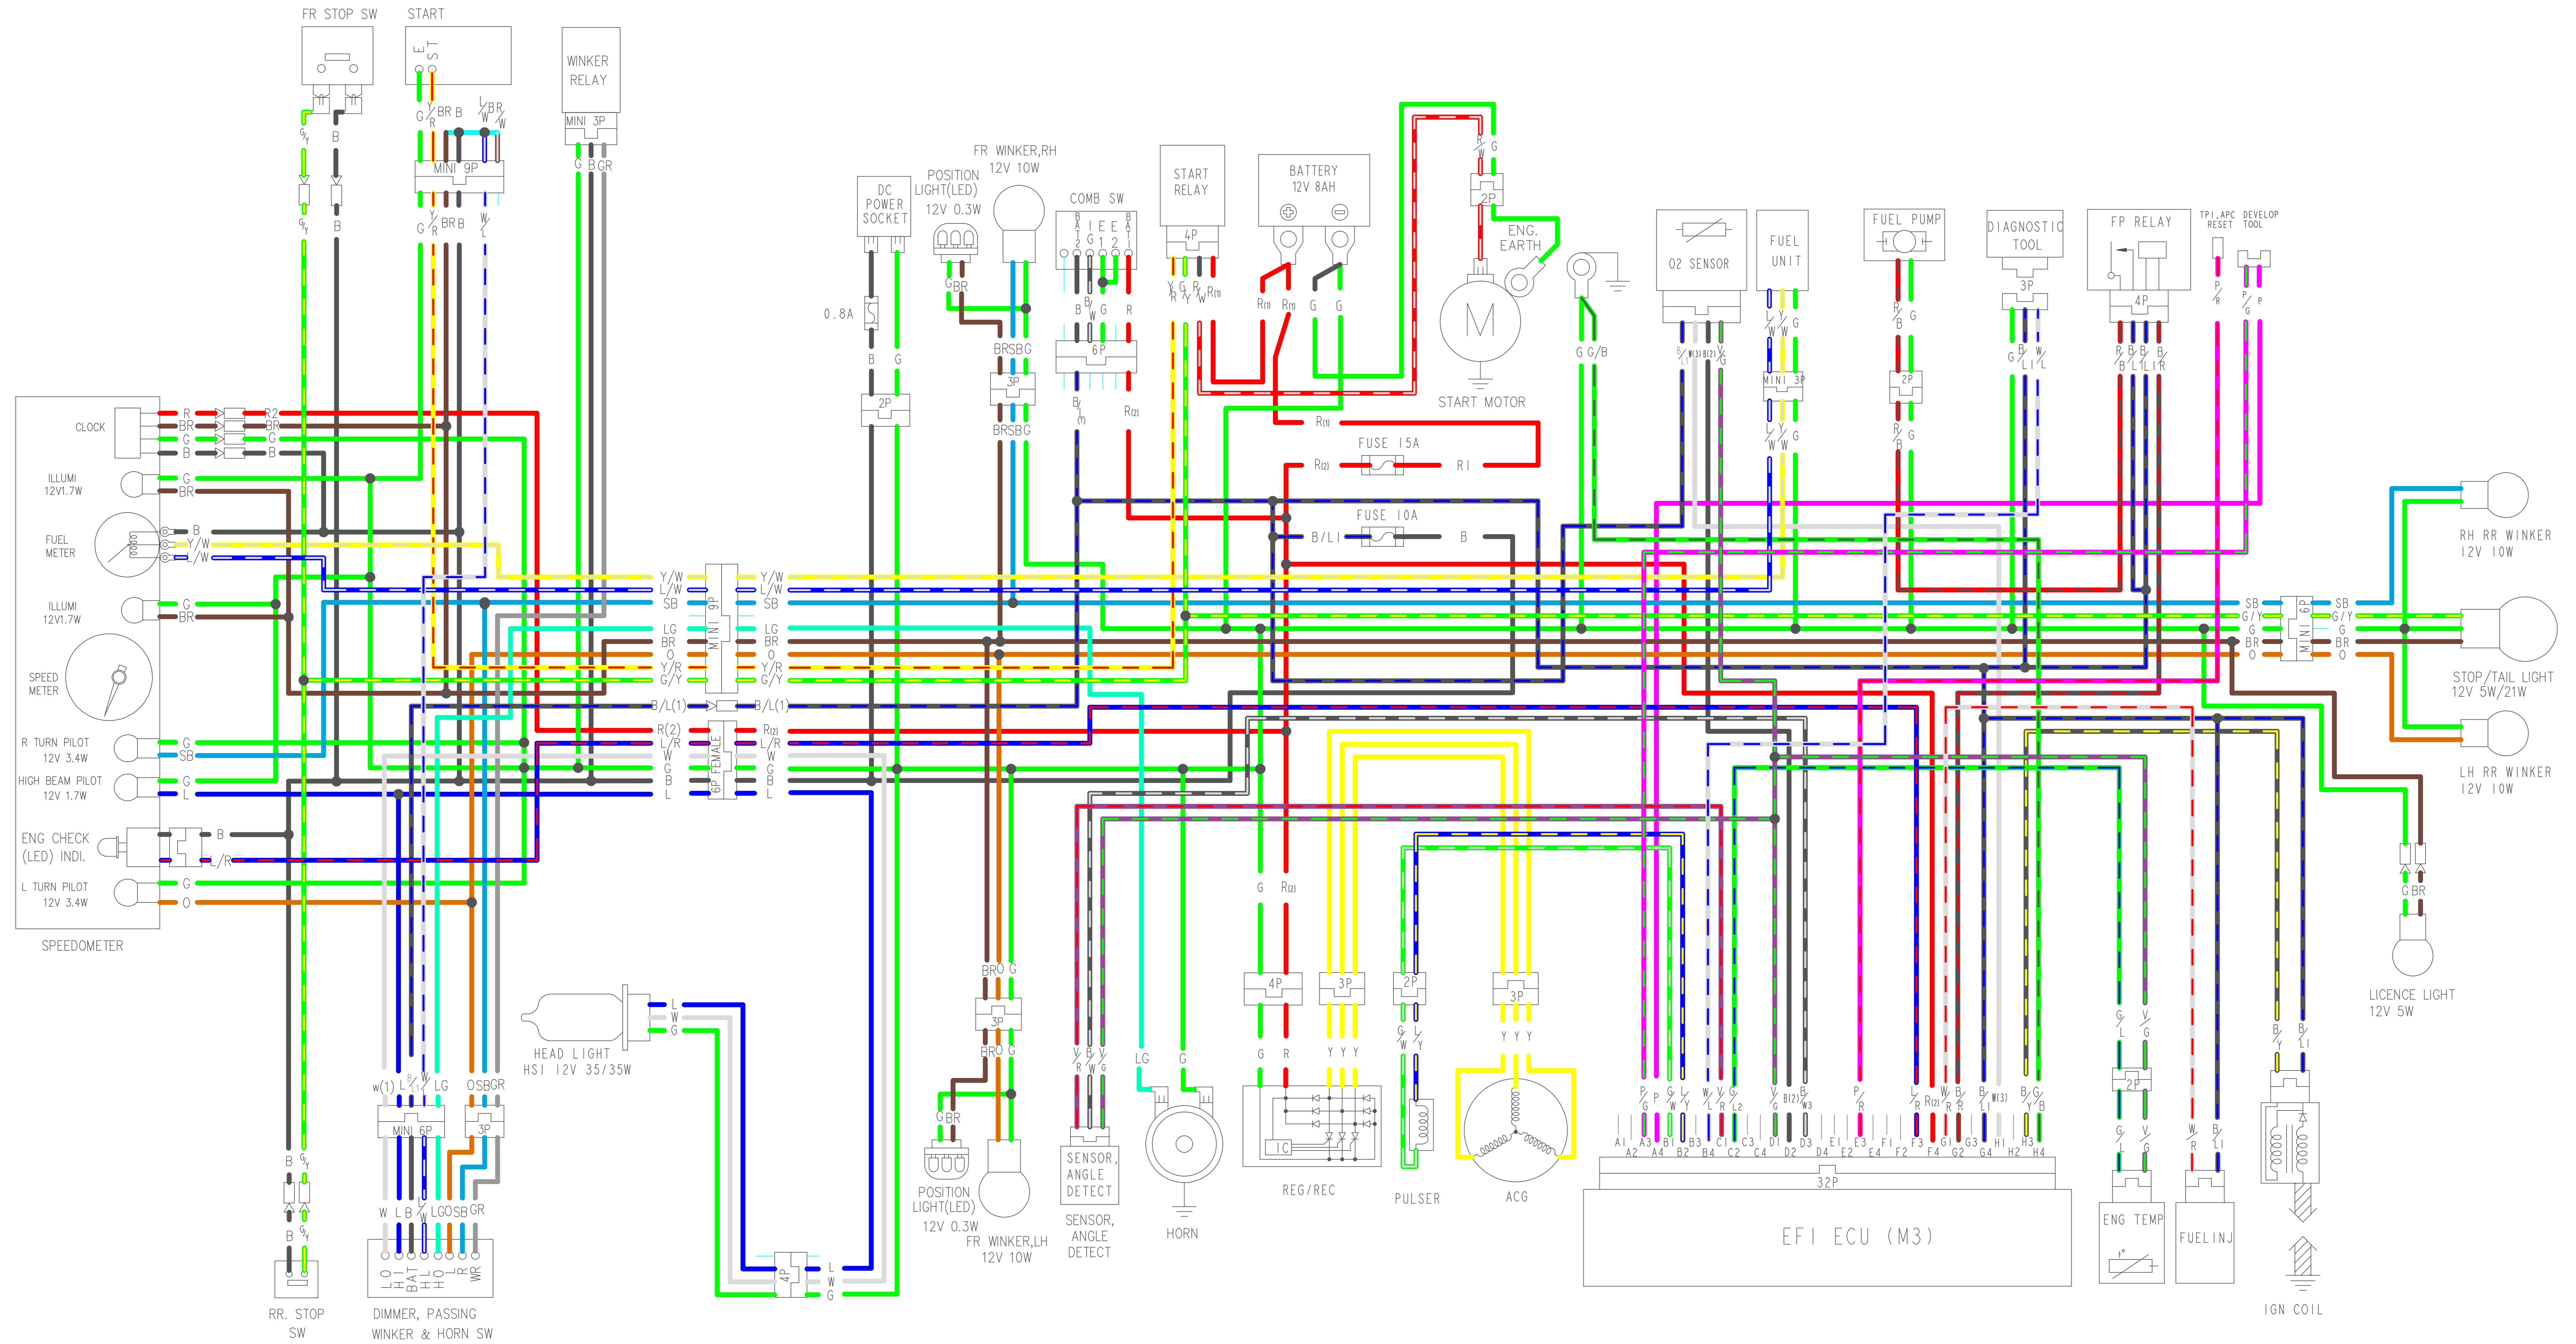


# Agility 50 R16 4T PLUS E5

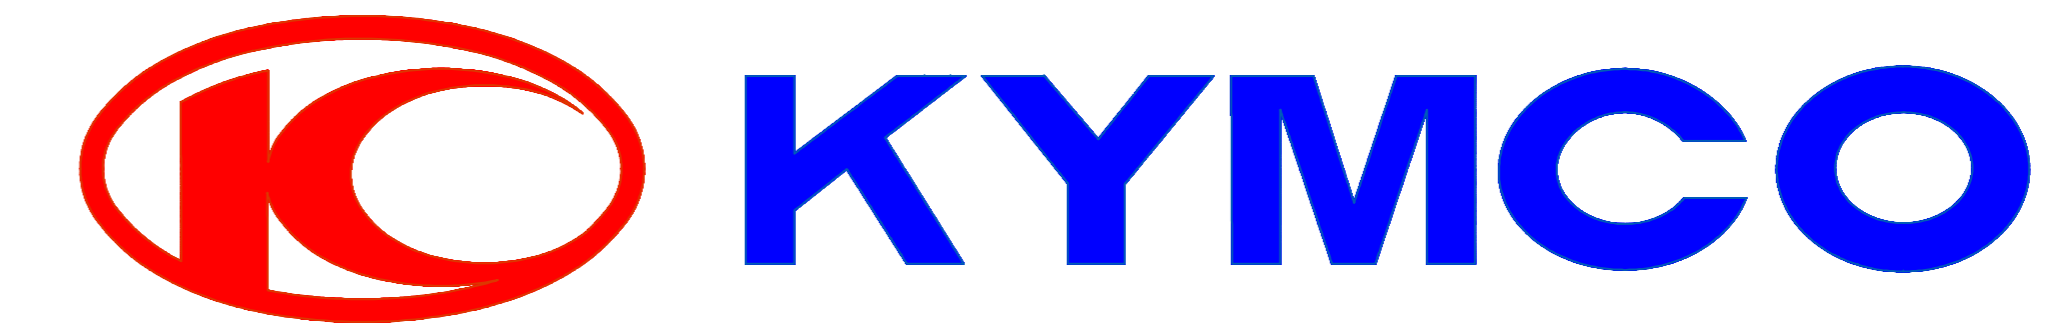

	IG	E1.E2	BAT1	BAT2
ON			○	○
OFF	○	○		
LOCK	○	○		
CORD COLOR	B/W	G	R	B

START SW	
FREE	ST E
PUSH	○ ○
CORD COLOR	Y/R G

WINKER SW		
	WR	R L
L ←	○	○
N ■		
R →	○	○
CORD COLOR	GR SB	O

DIMMER & PASSING SW			
	HL	LO	HI PASS
LO ↗	○	○	
(N)	○	○	
HI ↘	○	○	
PUSH	○	○	
CORD COLOR	L/W	W	L B

HORN SW	
FREE	HO BAT
PUSH	○ ○
CORD COLOR	LG B

C4				F4	R(2)	VBD	DIRECT BATTERY VOLTAGE	ECU 輸入電壓		
C3				F3	L/R	CELP	CHECK ENGINE LAMP	CHECK LAMP		
C2	G/L	ECT	ENGINE TEMPERATURE SENSOR	F2						
C1	V/R	V.SENS	SENSOR SUPPLY	F1						
B4	W/L	K.L.I.NE	SERIAL COMMUNICATIONS	E4						
B3				E3	P/R	DIG.2	DIGITAL INPUT (TPI RESET)	TPI 切換	H4	G/B PGND POWER GROUND
B2	L/Y	CRK_POS	CRANKSHAFT POSITION SENSOR (+)	E2					H3	B/Y IGN IGNITION COIL
B1	G/W	CRK_NEG	CRANKSHAFT POSITION SENSOR (-)	E1					H2	
A4	P	CAN_LOW	SERIAL COMMUNICATIONS	D4					H1	W HEGO.HEAT HEATED O2 SENSOR
A3	P/G	CAN_HIGH	SERIAL COMMUNICATIONS	D3	B/W	TSW	TILT SWITCH	傾斜信號	G4	B/L VBK BATTERY VOLTAGE AFTER KEY
A2				D2	B	HEGO.SENS	HEATED O2 SENSOR	O2 信號	G2	B/R FUEL.PUMP FUEL PUMP
A1				D1	V/G	SGND	SENSOR GROUND	ECU 接地	G1	W/R INJ INJECTOR
PIN	COLOR	LABEL	PI FUNCTION	PIN	COLOR	LABEL	PI FUNCTION		PIN	COLOR LABEL PI FUNCTION